COOKTOP PARTS

For Models:RCS2002RS01
(Stainless Steel)

20"ELECTRIC
BUILT−IN
COOKTOP

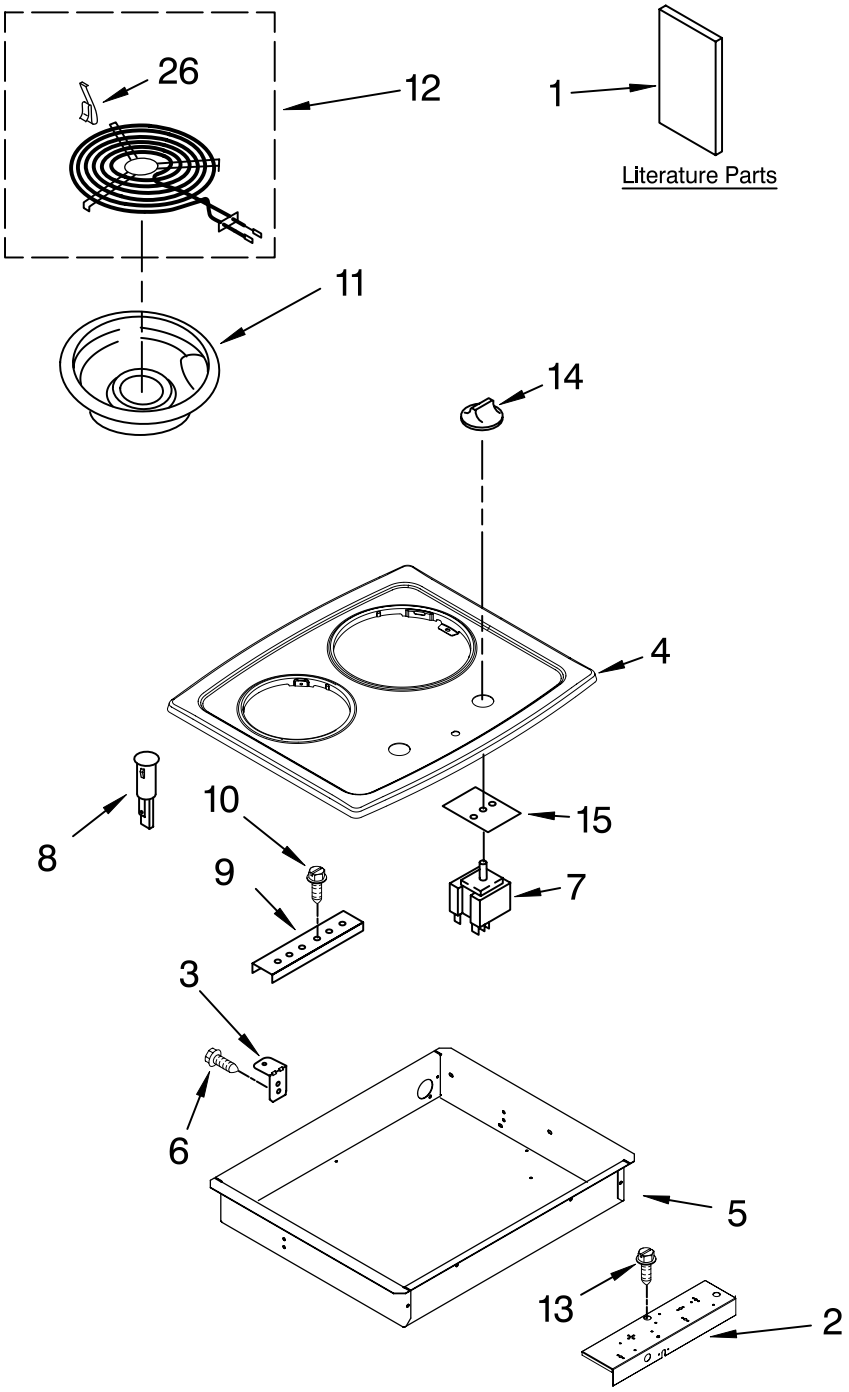

Illus. No.	Part No.	DESCRIPTION
1		LITERATURE PARTS
	8286310	Installation Instructions
	8286613	Use & Care Guide
	3191638	Safer Cooking Tips
	9759133	Safer Cooking Tips
2	8286443	Bracket, Switch Mounting
3	3192454	Bracket, Mounting
4		Cooktop
	8286389LM	Stainless Steel
5	8286376	Burner Box
6	3196537	Screw
7		Switch Infinite
	3191475	Use W/8" Element (Yellow Shaft)
	3191472	Use W/6" Element (Blue Shaft)
8	3192213	Light, Indicator
9	4455917	Bracket, Mounting
10	3400093	Screw
11		Pan, Surface Unit
	3195208	6"
	3195209	8"
12		Element, Surface
	3191460	6"
	3191459	8"
13	3400855	Screw
14	8286043BL	Knob, Control (2)
15	3183956	Seal, Switch Shaft (2)
26	3195917	Clip, Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models:RCS2002RS01
(Stainless Steel)

Illus. No.	Part No.	DESCRIPTION

FOLLOWING PARTS NOT ILLUSTRATED

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°C
242820	Wire, Black 14 Ga. 150°C
242821	Wire, Blue 14 Ga. 150°C
242822	Wire, Brown 14 Ga. 150°C
242830	Wire, Brown 14 Ga. 200°C
242823	Wire, Green 14 Ga. 150°C
242824	Wire, Orange 14 Ga. 150°C
242829	Wire, Red 12 Ga. 150°C
242825	Wire, Red 14 Ga. 150°C
242831	Wire, Red 14 Ga. 200°C
242826	Wire, White 14 Ga. 150°C
242827	Wire, Yellow 14 Ga. 150°C
242832	Wire, Yellow 14 Ga. 200°C

WIRING HARNESS PARTS

Wiring Harness Parts

8286437	Harness, Wiring (Main)
3400843	Screw
8286388	Bracket, Harness Cover
3196160	Screw (3)
3196160	Screw
313438	Clip
8286395	Cord, Power
3400843	Screw
4454384	Ground Wire
3400015	Screw
4455805	Grommet, Harness